

PARTS LIST

CAL. Y652B

Cal. Y652B		Cal. Y652B	
PARTS NO.	PARTS NAME	PARTS NO.	PARTS NAME
102 322	Auxiliary plate	4270 033	Battery connection (-)
125 478	Train wheel bridge	* 4271 018	Battery connection (+)
231 481	Third wheel & pinion	4213 322	Connector
*241 481	Fourth wheel & pinion	4398 339	Liquid crystal panel frame
*241 482	Fourth wheel & pinion	4408 026	Insulating spacer for circuit block
261 481	Minute wheel	4455 322	Reset lever
*270 481	Center minute wheel	4510 356	Liquid crystal panel (Normal)
*270 482	Center minute wheel	4510 357	Liquid crystal panel (Gold)
*271 064	Hour wheel	4521 356	Reflecting mirror
*271 082	Hour wheel	4530 230	Bulb
*354 323	Winding stem (14.74 mm)	4589 002	Piezoelectric element
*354 324	Winding stem (16.24 mm)	*4589 650	Piezoelectric element
*354 325	Winding stem (19.24 mm)	012 168	Train wheel bridge screw
361 322	Second setting lever spring	012 168	Circuit block screw
391 322	Train wheel setting lever	012 470	Battery clamp screw
426 001	Train wheel bridge support	012 470	Winding stem holder screw
701 481	Fifth wheel & pinion	012 470	Screw for battery connection (+)
735 322	Winding stem holder	017 286	Tube for battery connection (+) screw (B)
805 481	Intermediate setting wheel	017 298	Tube for train wheel bridge (A)
4001 317	Circuit block	017 653	Tube for circuit block screw (A)
4002 480	Coil block	017 654	Tube for circuit block screw (B)
4146 480	Step rotor	017 655	Tube for train wheel bridge (B)
4216 322	Insulator for circuit block	017 656	Tube for battery clamp screw
4225 025	Battery clamp	017 656	Tube for winding stem holder screw
*4225 322	Battery clamp	017 656	Tube for battery connection (+) screw (A)
4239 481	Rotor stator	SEIZAIKEN TR41W	Battery
4245 327	Switch spring	MAXELL SR41W	
4246 013	Speaker lead terminal (280 mm)	SONY EVEREADY	
*4246 021	Speaker lead terminal (321 mm)	392	

(0 jewel)

Remarks:

- * Fourth wheel and pinion, Center minute wheel and pinion, Hour wheel.
There are two different types as specified below.

Combination:

Type	Fourth wheel and pinion	Center minute wheel	Hour wheel
M	*241 481	*270 481	*271 064
L	*241 482	*270 482	*271 082

- * Battery clamp, Speaker lead terminal and Piezoelectric element
4225 322 (Battery clamp)
4246 021 (Speaker lead terminal) } Used for "100m water-resistant" watch
4589 650 (Piezoelectric element)

- * Winding stem
The type of winding stem is determined based on the design of case.

- * Battery connection (+) for Pulsar Watches

4271024 (Pulsar marking)